

ISOMETER® IR425

Insulation monitoring device for unearthed AC/DC control circuits (IT systems)





Device features

- Insulation monitoring for AC/DC control circuits 0...300 V
- Two separately adjustable response values
- Preset function (automatic setting of basic parameters)
- Connection monitoring system/earth
- LEDs: Power On, Alarm 1, Alarm 2
- Internal/external test/reset button
- Two separate alarm relays (one changeover contact each)
- N/O or N/C operation, selectable
- Fault memory behaviour, selectable
- Self monitoring with automatic alarm
- Multi-functional LC display
- Adjustable response delay
- Two-module enclosure (36 mm)
- Push-wire terminal (two terminals per connection)

Approvals



Product description

The ISOMETER®s of the IR425 series monitor the insulation resistance of unearthed AC/DC control circuits (IT systems) 0...300 V. DC components existing in AC/DC systems do not influence the operating characteristics. An external supply voltage allows de-energised systems to be monitored too.

Application

- AC/DC control circuits in the industrial sector, mechanical engineering, power plants, elevators, automation systems etc.
- AC/DC control and auxiliary circuits in accordance with DIN EN 60204-1 "Electrical equipment of machines", IEC 60204-1, EN 60204-1
- AC/DC auxiliary circuits in accordance with DIN VDE 0100-725 (VDE 0100-725)
- Smaller AC/DC IT systems such as lighting systems

Function

The currently measured insulation resistance is indicated on the LC display. In this way any changes, for example when circuits are connected to the system, can be recognised easily. When the value falls below the preset response values, the response delay "t_{on}" starts. Once the response delay "t_{on}" has elapsed, the alarm relays "K1/K2" switch and the alarm LEDs "AL1/AL2" light up. Two separately adjustable response values/alarm relays allow a distinction to be made between prewarning and alarm. If the insulation resistance exceeds the release value (response value plus hysteresis), the alarm relays return to their initial position. Insulation faults are distinguished according to AC and DC faults (indication ±). In the event of insulation faults on the plus or minus conductor, the corresponding +/- symbol is activated on the display. If the fault memory is enabled, the alarm relays remain in the alarm state until the reset button is pressed or until the supply voltage is switched off. The device function can be tested using the test button. The parameterisation of the device can be carried out via the LC display or the function keys integrated in the front plate.

Connection monitoring

The connections to the system (L1/L2) and to earth (E/KE) are either automatically checked every 24 h, or by pressing the test button or when supply voltage has been connected. In case of interruption of a connecting lead, the alarm relay K2 switch, the LEDs ON/AL1/AL2 flash and the following message appears on the display:

"E.02" signals a fault in the connecting leads to the system,

"E.01" signals a fault in the connecting leads to PE.

After eliminating the fault, the alarm relays return to their initial position either automatically or by pressing the reset button.

Preset function

After connecting the device for the first time, the nominal system voltage is measured and the response values are set automatically.

Measurement method


The ISOMETER® IR425 uses the AMP measuring principle.

Standards


The ISOMETER® of the IR425 complies with the requirements of the device standards:

- DIN EN 61557-8 (VDE 0413-8)
- EN 61557-8
- IEC 61557-8

Operating elements

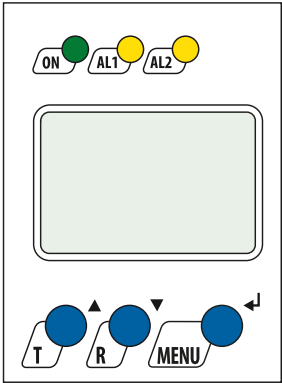Device front	Element	Function
	ON	green - On
	AL1	yellow - Pre-warning
	AL2	yellow - Alarm
	▲ T	Up button Test button (press > 1.5 s) By pressing and holding the test button, the display elements are indicated.
	▼ R	Down button Reset button (press > 1.5 s)
	↵ MENU	ENTER MENU button (press > 1.5 s)

Wiring diagram

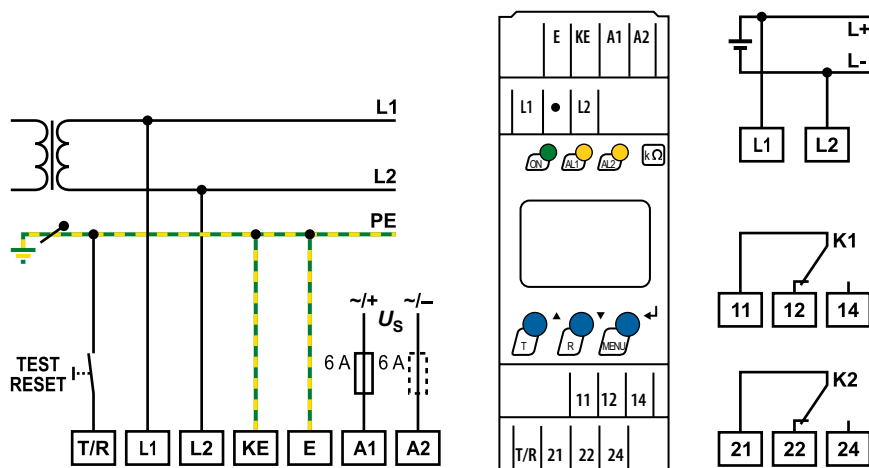

A1, A2	Supply voltage U_s (see ordering details) via fuse
E, KE	Separate connection of E, KE to PE
L1, L2	Connection of the AC system to be monitored: AC: connect terminals L1, L2 to conductor L1, L2.
11, 12, 14	Alarm relay "K1": Alarm 1
21, 22, 23	Alarm relay "K2": Alarm 2

T/R	Combined test and reset button "T/R": short-time pressing (< 1.5 s) = RESET, long-time pressing (> 1.5 s) = TEST
	Line protection by a fuse in accordance with IEC 60364-4-43 (6 A fuse recommended). In case of supply (A1/A2) from an IT system, both lines have to be protected by a fuse.

Technical data

Insulation coordination acc. to IEC 60664-1/IEC 60664-3

Rated insulation voltage	250 V
Rated impulse voltage/Pollution degree	4 kV/3
Protective separation (reinforced insulation) between: (A1, A2) - (L1, L2, E, KE, T/R) - (11, 12, 14) - (21, 22, 24)	
Voltage test acc. IEC 61010-1	2.2 kV

Supply voltage

IR425-D4-1, IR425-D4W-1:

Supply voltage U_s	AC 16...72 V/DC 9.6...94 V
Frequency range U_s	15...460 Hz/DC

IR425-D4-2, IR425-D4W-2:

Supply voltage U_s	AC/DC 70...300 V
Frequency range U_s	15...460 Hz, DC
Power consumption	≤ 4 VA

IT System being monitored

Nominal system voltage U_n	AC/DC 0...300 V
Nominal frequency f_n	15...460 Hz

Response values

Response value R_{an1} (ALARM 1)	1...200 kΩ
Response value R_{an1} (ALARM 2)	1...200 kΩ
Preset function:	
$U_n \leq 72$ V: R_{an1} (ALARM 1)/ R_{an2} (ALARM 2)	20 kΩ/10 kΩ
$U_n > 72$ V: R_{an1} (ALARM 1)/ R_{an2} (ALARM 2)	46 kΩ/23 kΩ
Operating error (1...5 kΩ)/(5...200 kΩ)	±0.5 kΩ/±15 %
Hysteresis (1...5 kΩ)/(5...200 kΩ)	+1 kΩ/+25 %

Time response

Response time t_{an} at $R_F = 0,5 \times R_{an}$ and $C_e = 1 \mu\text{F}$	≤ 2 s
Starting delay t	0...10 s
Response delay t_{on}	0...99 s

Measuring circuit

Measuring voltage U_m	±12 V
Measuring current I_m ($R_F = 0 \Omega$)	≤ 200 μA
Internal d.c. resistance R_i	≥ 62 kΩ
Internal impedance Z_i (50 Hz)	≥ 60 kΩ
Admissible extraneous d.c. voltage U_{fg}	≤ DC 300 V
System leakage capacitance C_e	≤ 20 μF

Displays, memory

Display	LC display, multi-functional, non-illuminated
Display range, measuring value	1 kΩ...1 MΩ
Operating error (1...5 kΩ)	±0.5 kΩ
Percentage operating error (5 kΩ...1 MΩ)	±15 %
Password	off/0...999
Fault memory (alarm relay)	on/off

Inputs

Cable length external test/reset button	≤ 10 m
---	--------

Switching elements

Number of	2 (changeover contacts K1, K2)
Operating principle	(N/O operation)(N/C operation)
Electrical endurance	10000 switching operations

Contact data according IEC 60947-5-1

Utilization category	AC-13 / AC-14 / DC-12 / DC-12 / DC-12
Rated operational voltage	230 V / 230 V / 220 V / 110 V / 24 V
Rated operational current	5 A / 3 A / 0.1 A / 0.2 A / 1 A
Minimum current	1 mA at AC/DC ≥ 10 V

Environment/EMC

EMC	acc. to IEC 61326-2-4
Operating temperature	-25...+55 °C

Climatic categories acc. to IEC 60721 (except condensation and formation of ice)

Stationary use (IEC 60721-3-3)	3K22
Transport (IEC 60721-3-2)	2K11
Storage (IEC 60721-3-1)	1K22

Classification of mechanical conditions acc. to IEC 60721:

Stationary use (IEC 60721-3-3)	3M11
for W variant	3M12
Transport (IEC 60721-3-2)	2M4
Storage (IEC 60721-3-1)	1M12

Connection

Connection type	screw-type terminal or push-wire terminal
-----------------	---

Connection screw terminals

Connection properties	
rigid	0.2...4 mm ² (AWG 24-12)
flexible	0.2...2.5 mm ² (AWG 24-14)
Two conductors with the same cross section	
rigid/flexible	0.2...1.5 mm ² (AWG 24-16)
Stripping length	8...9 mm
Tightening torque, terminal screws	0.5...0.6 Nm

Connection push-wire terminals

Connection properties	
rigid	0.2...2.5 mm ² (AWG 24-14)
flexible	
without ferrules	0.75...2.5 mm ² (AWG 19-14)
with ferrules	0.2...1.5 mm ² (AWG 24-16)
Stripping length	10 mm
Opening force	50 N
Test opening, diameter	2.1 mm

Other details

Operating mode	continuous
Position	any position
Degree of protection internal components (EN 60529)	IP30
Degree of protection terminals (EN 60529)	IP20
Enclosure material	polycarbonat
Flammability class	UL94 V-0
DIN rail mounting acc. to	IEC 60715
Screw fixing	2 x M4 with mounting clip
Weight	approx. 150 g

Ordering information

Type	Supply voltage ¹⁾ U _s	Art. No.	
		screw terminals	push-wire terminals
IR425-D4-1	DC 9.6...94 V / AC 16...72 V, 15...460 Hz	B91036403	B71036403
IR425-D4W-1		B91036403W	B71036403W
IR425-D4-2	DC 70...300 V / AC 70...300 V, 15...460 Hz	B91036402	B71036402
IR425-D4W-2		B91036402W	B71036402W


¹⁾ Absolute values

Accessories

Type designation	Art. No.
Mounting clip for screw mounting (1 piece per device)	B98060008

Dimension diagram XM420

Dimensions in mm

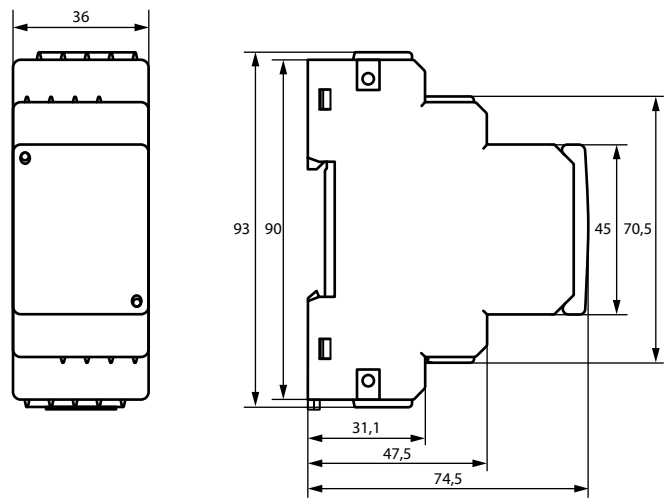



Bender GmbH & Co. KG

Londorfer Straße 65
35305 Grünberg
Germany

Tel.: +49 6401 807-0
info@bender.de
www.bender.de



© Bender GmbH & Co. KG, Germany
Subject to change!
The specified standards take into account the
edition valid until 07.2027 unless otherwise
indicated.